



Assembly Instructions

MODEL NO: CMZ1245

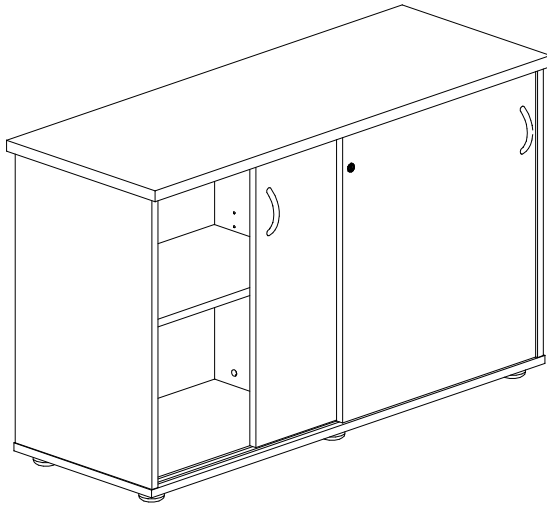


Pin 6x35 20PCS 1	Cushion ø42x25H 6PCS 6	ø6x40 2PCS 11
Cam 20PCS 2	Handle Screw 4x22 4PCS 7	Wood Screw 4x40 2PCS 12
Cam Cover 20PCS 3	Lock 1PCS 8	Wood Screw 4x16 2PCS 13
Shelf Pin 8PCS 4	Wood Screw 3.5x13 26PCS 9	
T-Handle 2PCS 5	73x23x15 2PCS 10	


STEP1

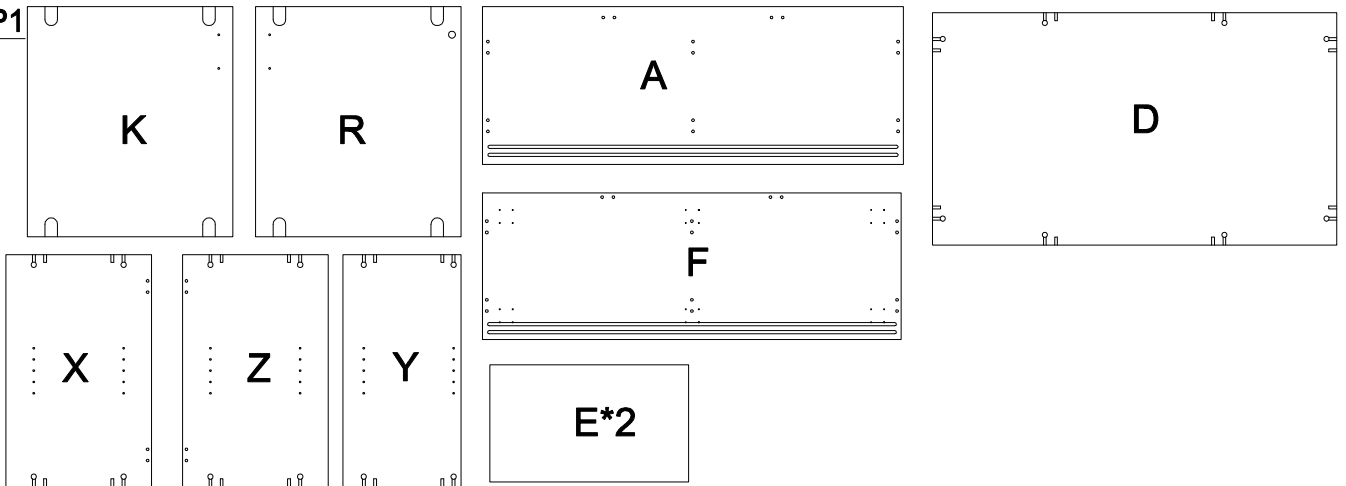

STEP2

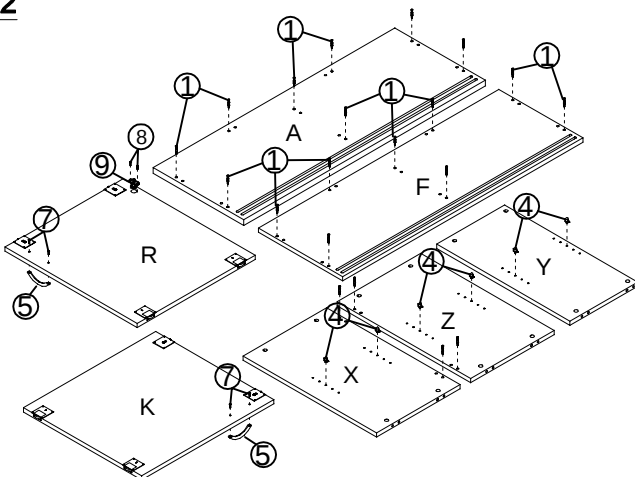


STEP3

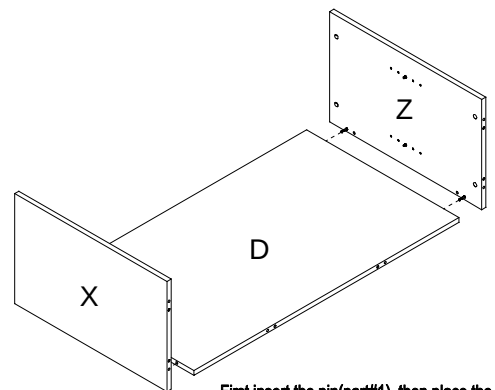

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: CMZ1245


STEP4

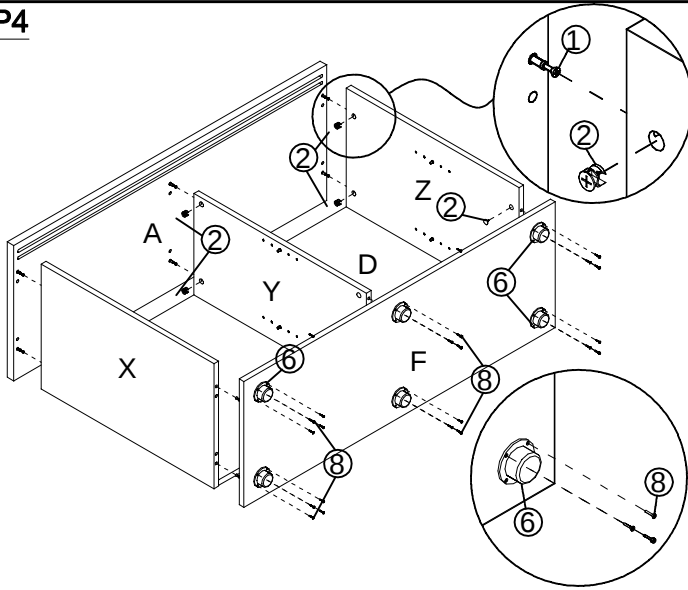


STEP5

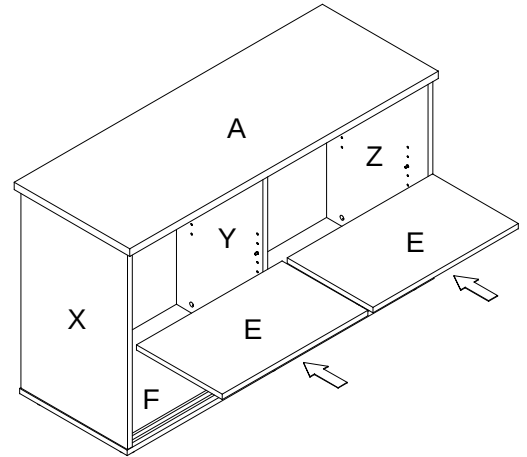


STEP6

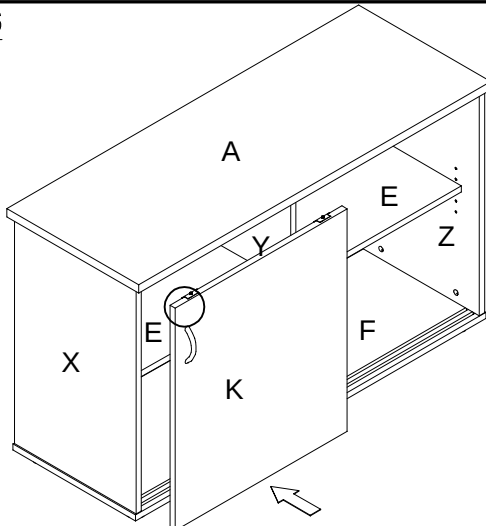


STEP7

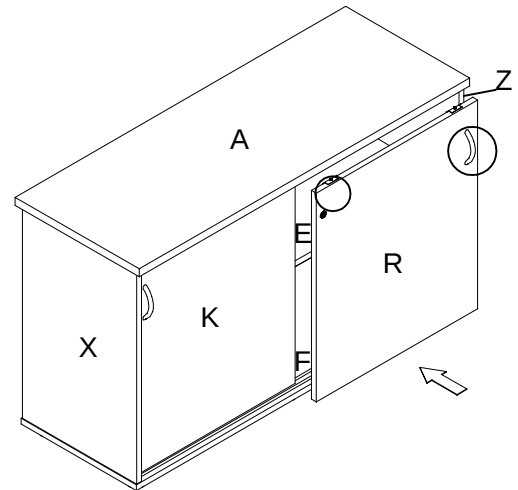

STEP8

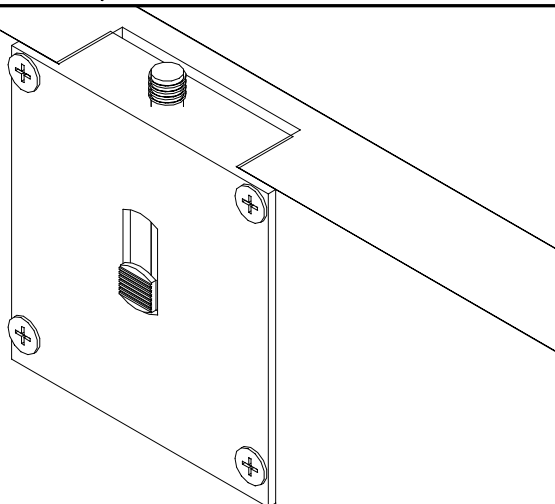


STEP9

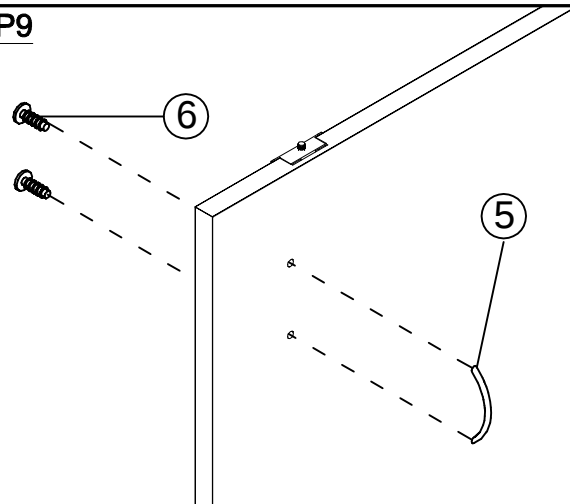

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: CMZ1245


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

STEP10

Make a mark with a pencil

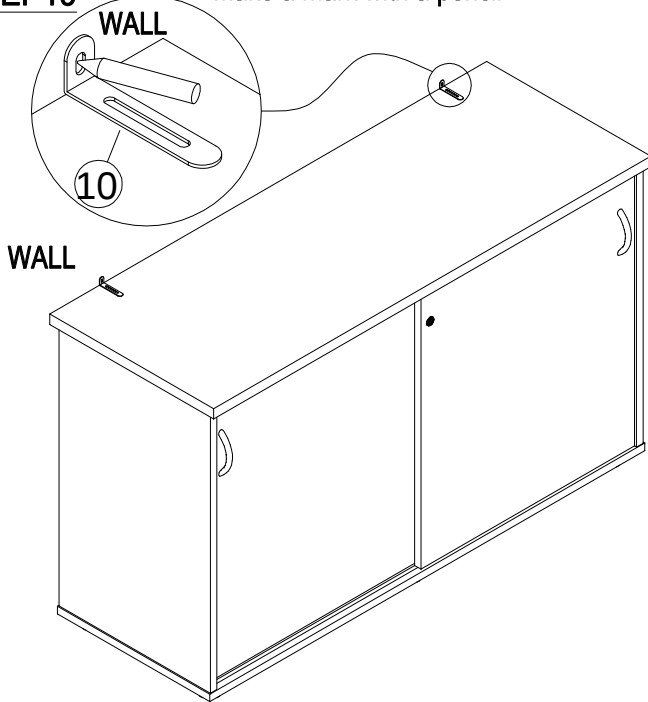


STEP11

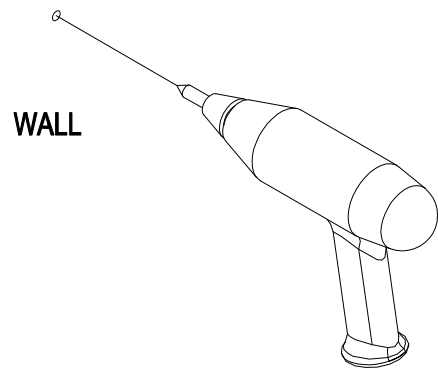


Drill holes at the marks with an electric drill

STEP12

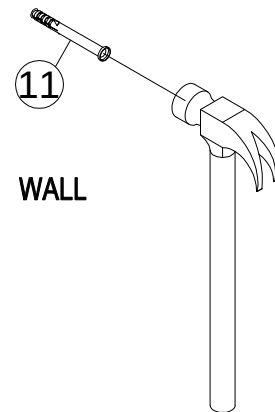


STEP13

WALL

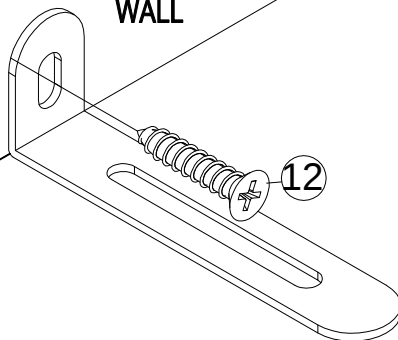

STEP14

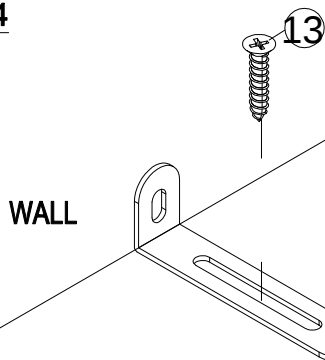

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture




This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: CMZ1845/CMZ1545

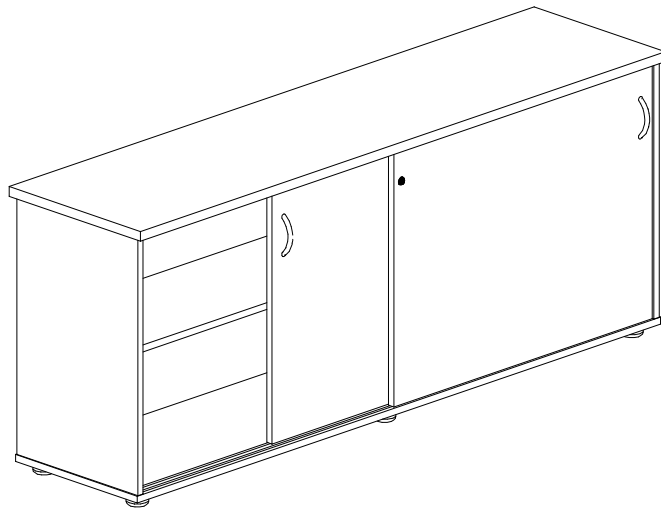


pin 1 6×35 CAM 24PCS	2 24PCS	Screw 3.5×13 8 26PCS	Wood Screw 4×16 12 2PCS
Cam Cover 3 24PCS	Bolt Minifix 4 8PCS	73×23×15 9 2PCS	
T-Handle 5 2PCS	Screw 4×22 6 4PCS	ø6×40 10 2PCS	
CUSHION 7 6PCS	LOCK 8 1PCS	Wood Screw 4×40 11 2PCS	


STEP1

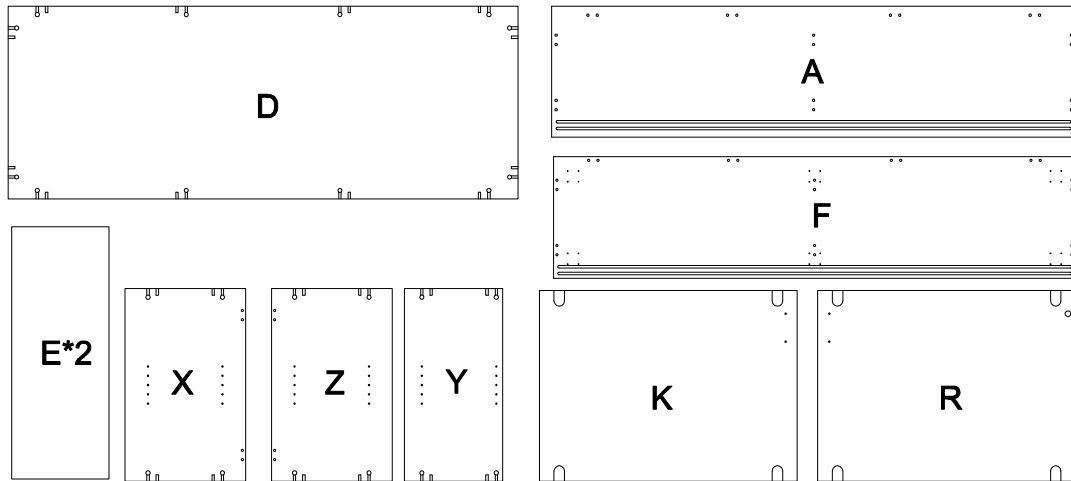

STEP2

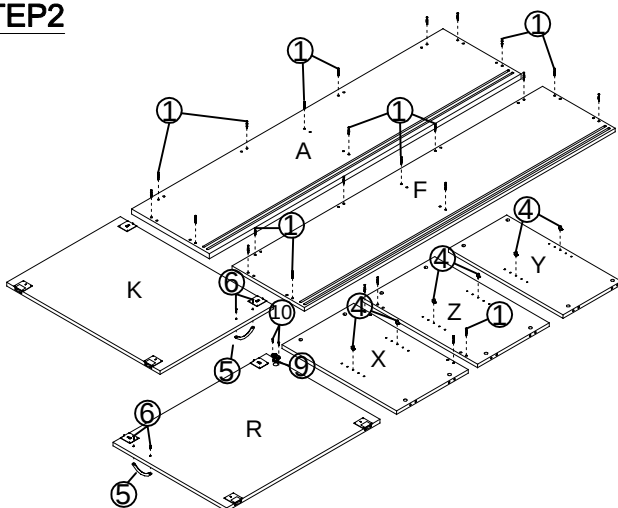


STEP3

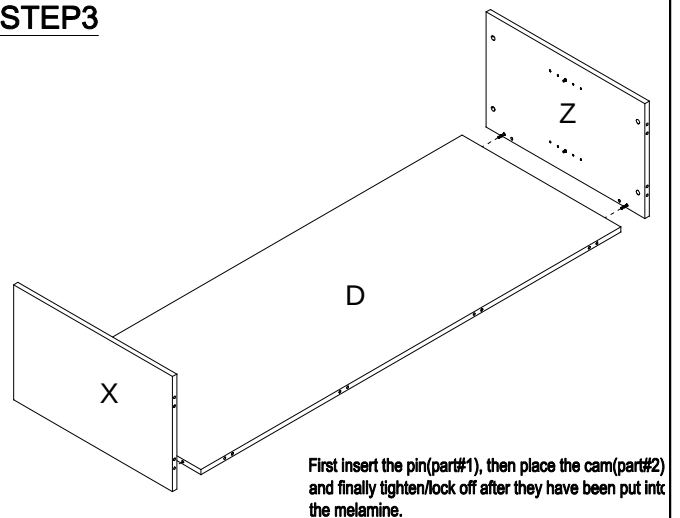

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: CMZ1845/CMZ1545


STEP4

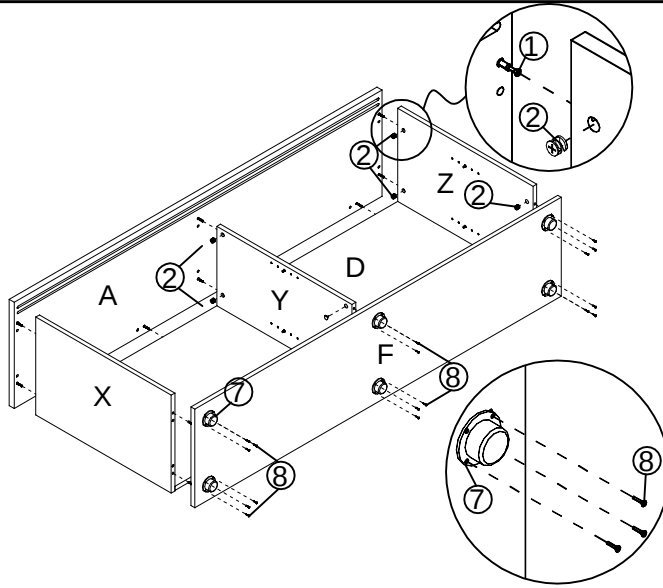


STEP5

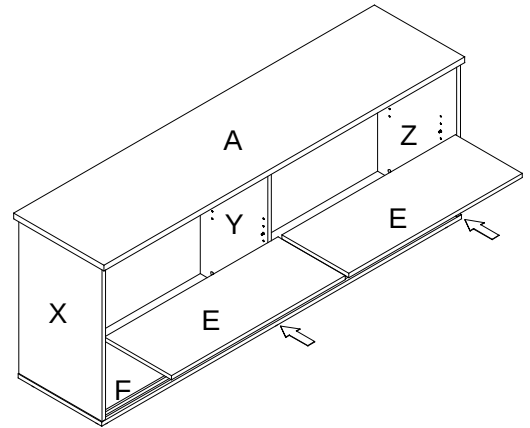


STEP6

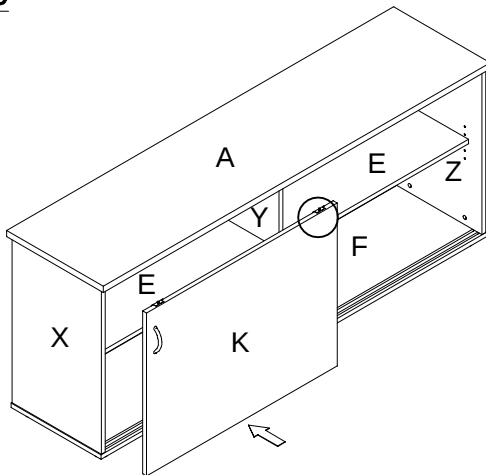


STEP7

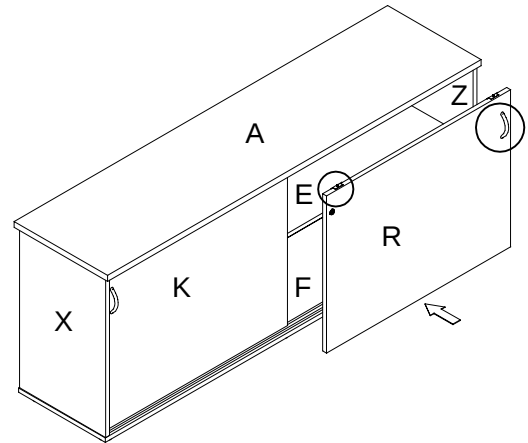

STEP8

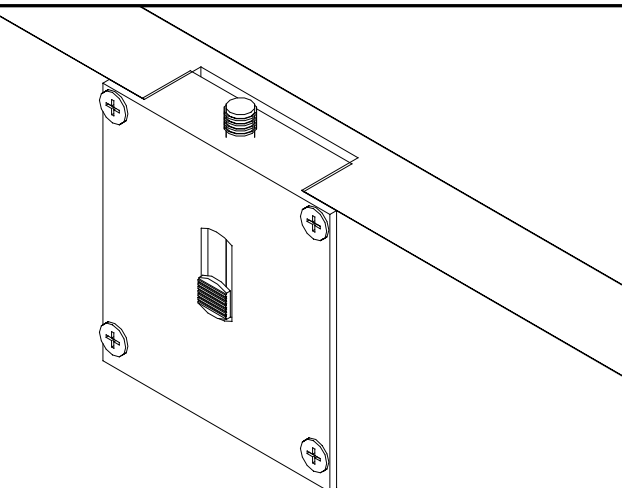


STEP9

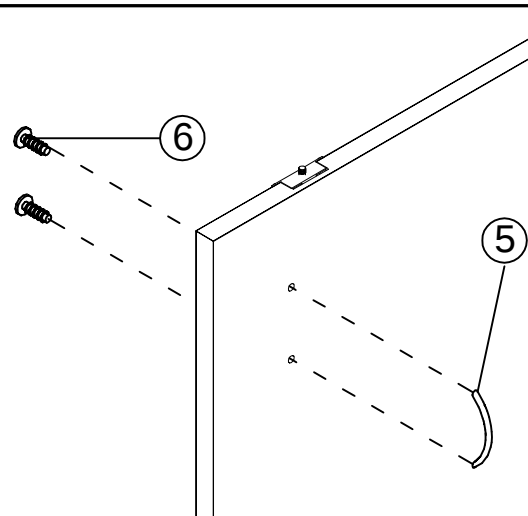

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: CMZ1845/CMZ1545/CMZ1845-S/CMZ186


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

STEP10

Make a mark with a pencil

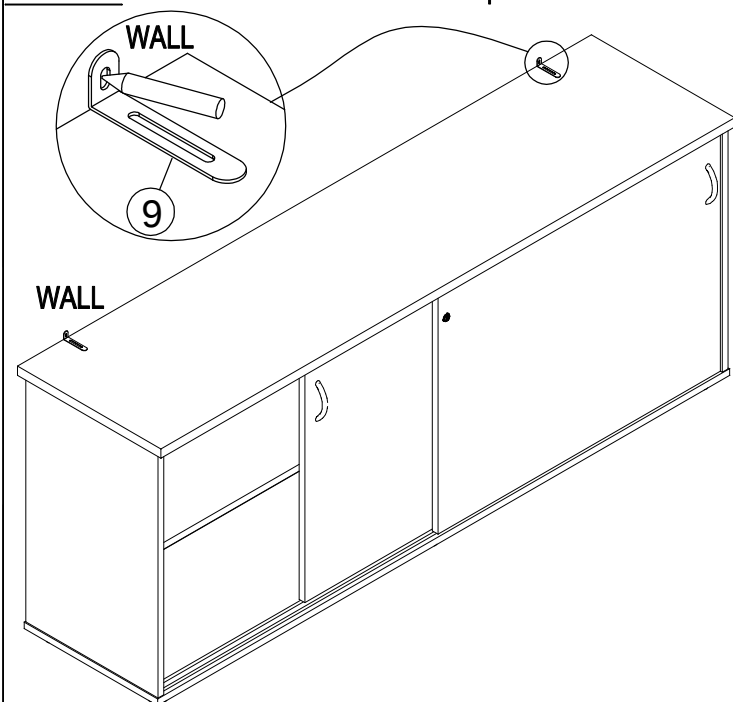


STEP11

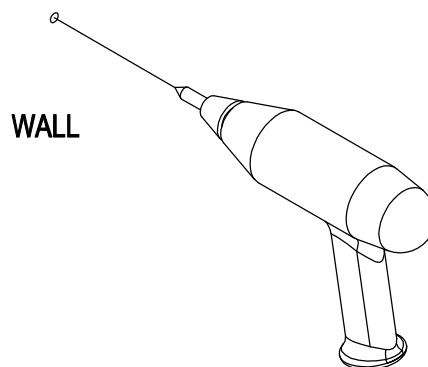


Drill holes at the marks with an electric drill

STEP12

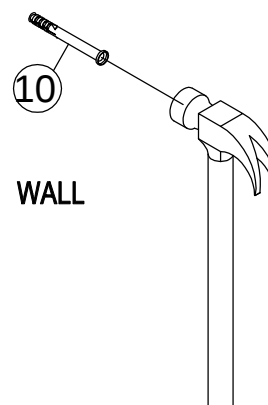


STEP13

WALL

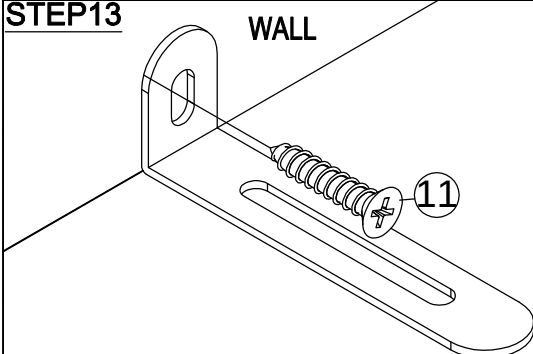

STEP14

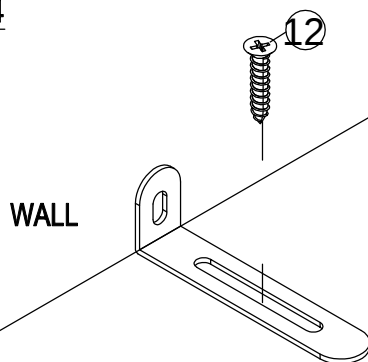

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

